

## INSTALLATION INSTRUCTIONS

CHIMES C210 & C211  
C210-W & C211-W  
CHIME KITS C212 & C213  
C212-W & C213-W

**NOTE**


Use Edwards No. 590 easymount transformer for normal installations. Installations requiring long bell wire runs to the doors, use Edwards No. 591 transformer for more satisfactory operation.

1. Remove chime from packing and pull the chime cover off to expose mechanism; remove corrugated liner around plunger mechanism. **CAUTION: DO NOT OIL THE CHIME PLUNGER MECHANISM.**
2. Pull the system wires from the transformer and door buttons through the opening under the coils - in the rear of the backplate.
3. Fasten the chime securely in place in the desired location. **BE SURE THE PLUNGERS POINT UPWARDS.**
4. Connect wire leads to their proper terminals on the terminal board as shown in the diagram below.
5. Press the chime cover in place over the backplate.


**IMPORTANT**

When chime is installed, check all door pushbuttons. If a pushbutton should stick in an operated position, the chime coil may burn out.

**WIRING FOR CAT. C210, C212,  
C210-W, OR C212-W**

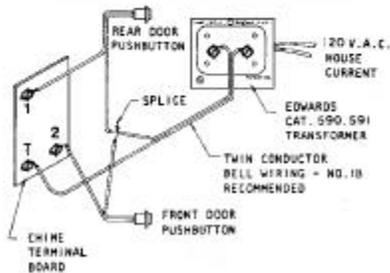

**WIRING FOR CAT. C211, C213,  
C211-W, OR C213-W**

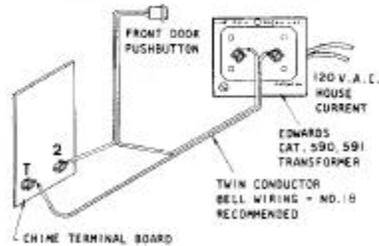

*7 1/2 x 4 3/4*